


# 19286

(D) MONTAGEANLEITUNG:	VERKÜRZTE SEITENWAND IN FLUCHT
(GB) INSTALLATION INSTRUCTIONS:	SHORTENED SIDE WALL IN PLANE
(F) NOTICE DE MONTAGE:	PAROI FIXE RACCOURCIE EN PLAN
(CZ) NÁVOD K MONTÁŽI:	ZKRÁCENÁ BOČNÍ STĚNA V ROVINĚ
(PL) INSTRUKCJA MONTAŻU:	SKRÓCONA ŚCIANA BOCZNA W PŁASZCZYZNIE
(SK) NÁVOD NA MONTÁŽ:	SKRÁTENÁ BOČNÁ STENA V ROVINE
(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ :	УКОРОЧЕННАЯ ФИКСИРОВАННАЯ ПАНЕЛЬ В ОДНОЙ ЛИНИИ
(E) INSTRUCCIONES DE MONTAJE:	PARED LATERAL A NIVEL
(RO) INSTRUCȚIUNI DE MONTAJ:	PARTE FIXĂ ÎN CONTINUARE SCURTATĂ

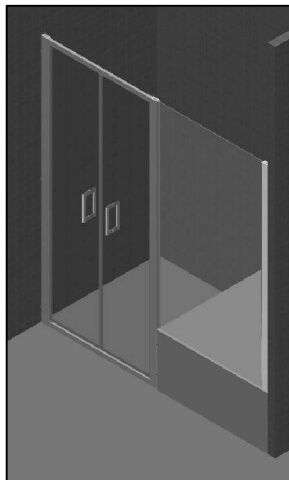

## Benötigtes Werkzeug:

Necessary tools:

Outil Nécessaire:



Nářadí potřebné pro montáž:

Potrzebne narzedzia:

Potrebné náradie:

необходимые инструменты:

Herramientas necesarias:

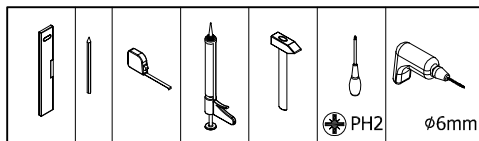

3x14295 4x32mm	3x16000 Ø6mm	3x81254
3x81253	1x41330	1x81237

## Zubehör:

Equipment:

Accessoires:

Příslušenství:










Dodatki:




Prislušenstvo:

Аксессуары:



Accesorios:

1.

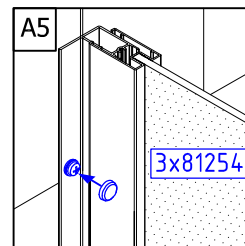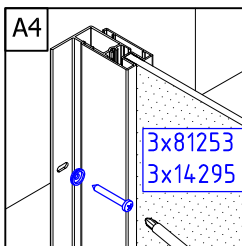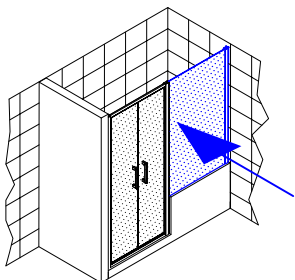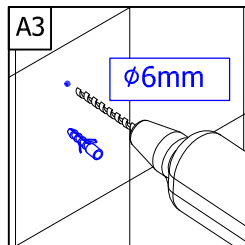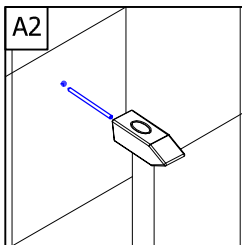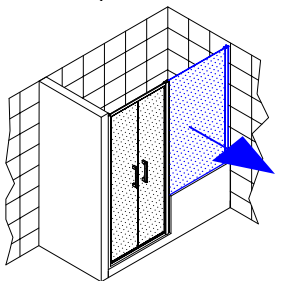
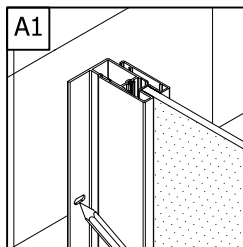
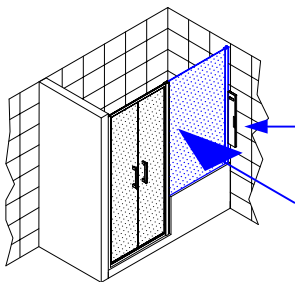
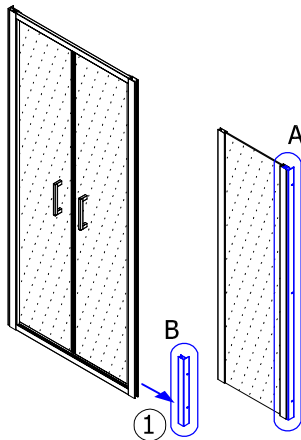


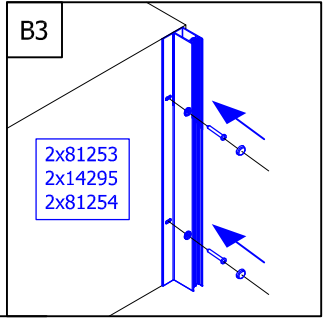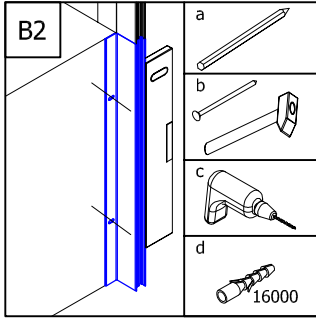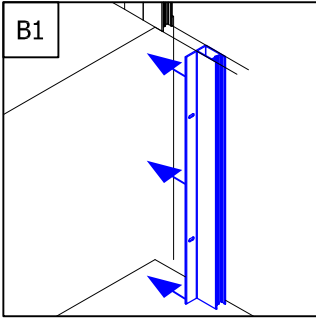

**2.**

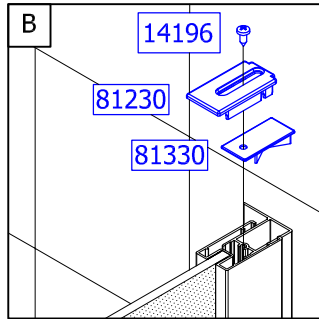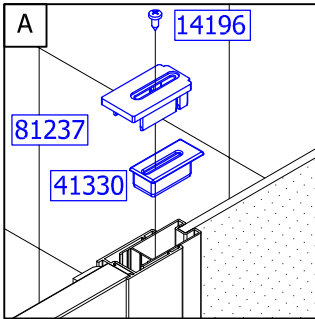

**3.**

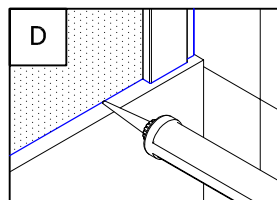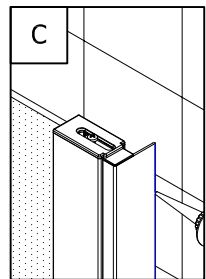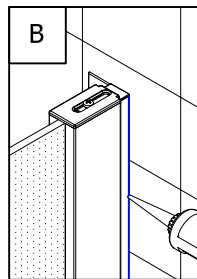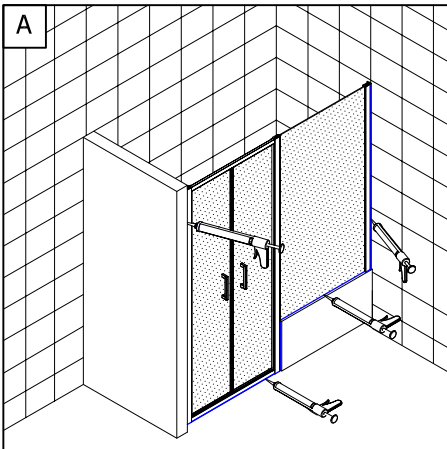

**Achtung!** Nur Sanitär-Silikon - bakterizid und fungizid eingestellt verwenden.

**Caution!** Use only bactericidal and fungicide sanitary silicone.

**Attention!** N'utiliser que du silicone sanitaire bactéricide et fongicide.

**Pozor!** Používejte pouze baktericidní a fungicidní sanitární silikon.

**Uwaga!** Stosować tylko silikon sanitarny - bakterio i grzybobójczy.

**Pozor!** Užívajte pouze baktericidný a fungicidný sanitárny silikon.

**Внимание!** Применяйте только антибактериальные силиконовые герметики с фунгицидом

**Cuidado!** Utilizar solamente silicona sanitaria bactericida y fungicida.

